

Load Cells for WSID 50th Dummy

Load Cell Model #	Load Cell Description	Calibration Fixture	Axis
IF-363	IRTRACC Displacement Sensor Assembly, Metric	TE-3600	DY
IF-363-IN	IRTRACC Displacement Sensor Assembly, Inch	TE-3600	DY
IF-367-1	2D IRTRACC Displacement Sensor, Rib Left	TE-3600	DY
IF-367-2	2D IRTRACC Displacement Sensor, Rib Right	TE-3600	DY
IF-368-1	2D IRTRACC Displacement Sensor, Shoulder Left	TE-3600	DY
IF-368-2	2D IRTRACC Displacement Sensor, Shoulder Right	TE-3600	DY
W50-71001	6-Axis Universal Lower Neck Load Cell	W50-71230	FX, FY, FZ, MX, MY, MZ
W50-71005	6-Axis Universal Neck Load Cell	W50-71230	FX, FY, FZ, MX, MY, MZ
W50-71010	6-Axis Universal Leg Load Cell	W50-71270	FX, FY, FZ, MX, MY, MZ
W50-71020	Uniaxial Knee Contact Load Cell	W50-71660	FY
W50-71051	Uniaxial Pubic Load Cell Assembly	W50-71056	FY
W50-71060	2-Axis Elbow Load Cell	W50-71450	MX, MY
W50-71070	6-Axis Universal Arm Load Cell	W50-71290	FX, FY, FZ, MX, MY, MZ
W50-71080	3-Axis Femoral Neck Load Cell, Right Side	W50-71520	FX, FY, FZ
W50-71081	3-Axis Femoral Neck Load Cell, Left Side	W50-71520	FX, FY, FZ
W50-71090	3 Axis Shoulder Load Cell, Left Side	W50-71850	FX, FY, FZ
W50-71091	3-Axis Shoulder Load Cell, Right Side	W50-71850	FX, FY, FZ